
# **EECS 16A Imaging 2**

TA, UCS1, UCS1, UCS1

## **Working In Pairs**

- Complete the lab in PAIRS, do ONE setup and notebook per groups.
- Speak to the staff if you do not have a lab partner.


#### **Semester Outline**

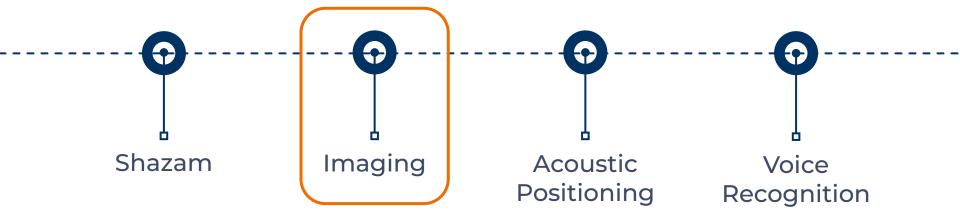


## **Agenda**

- Images as matrices and vectors
- Pixel-by-pixel scanning
- Reconstructing scans as images

#### **Our Imaging System**

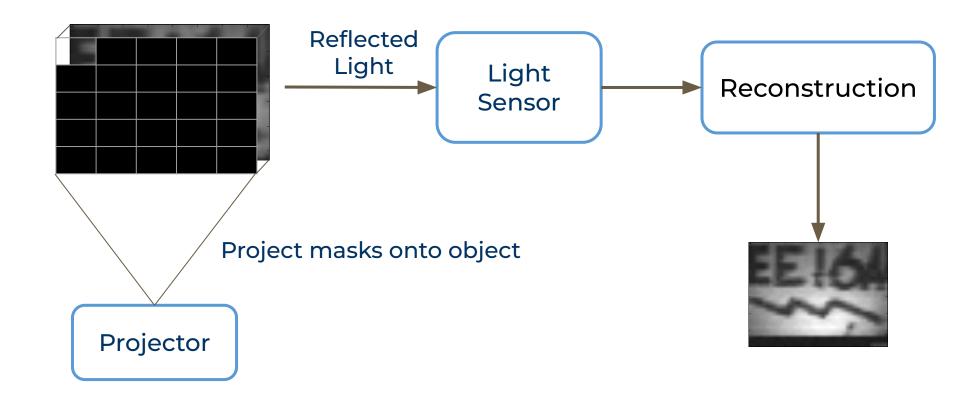

#### **Light Sensor?**

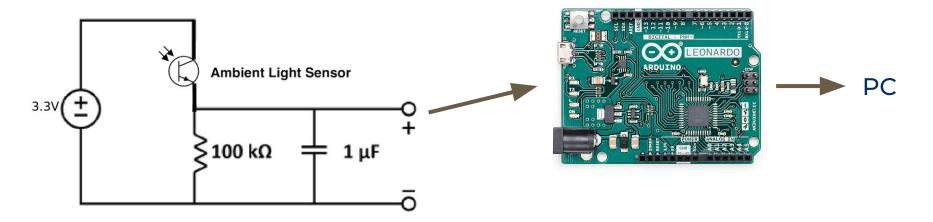

- This is the circuit that senses our reflected light
- For our purposes, it's a black box that turns light levels into voltage values, a signal that computers can work with

#### Why Imaging?

 Module Idea: use linear algebra techniques to capture real world images with limited sensors.


#### • Today:

- Become familiar with our imaging setup
- Use single-pixel scanning to capture image


## **Last Week: Imaging 1**

- Built our very first circuit!
  - O What did this circuit do?

#### Circuit Diagram

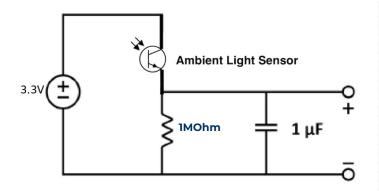

#### **Breadboard Diagram**

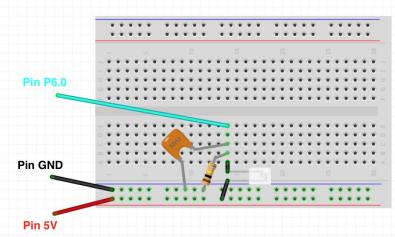

## **Today's Lab: Single Pixel Scanning**

- Circuit from last week measures light intensity
- Simulated projector illuminates image in a controlled way
- Python programming to reconstruct image

## Why?

#### • Imaging 1:

- Finding a link between physical quantities and voltage is powerful
- If you can digitize it, you can do anything (IOT devices, internet, code, processing)

#### Imaging 2:

- Our How do we get measurements and what makes them good?
- How do we get to an image?

## **Illuminating the Big Picture**

- Linear dependence
  - o When can you recover your image?
  - Ooes it matter what mask matrix you pick?
  - Does it matter how you cover the pixels?
- Invertibility
  - When can you solve Ax = b?
  - How does this relate to our system?
  - How does this affect the way we pick our masking matrix?




- What are the unknowns in our system?
  - $\circ$  The Image!
- We can do a lot of interesting processing on vectors, but we need to convert the image into one first
  - Our How can we do this?




[0]	[1]
[2]	[3]
[4]	[5]



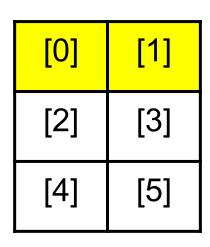

[0]

[1]

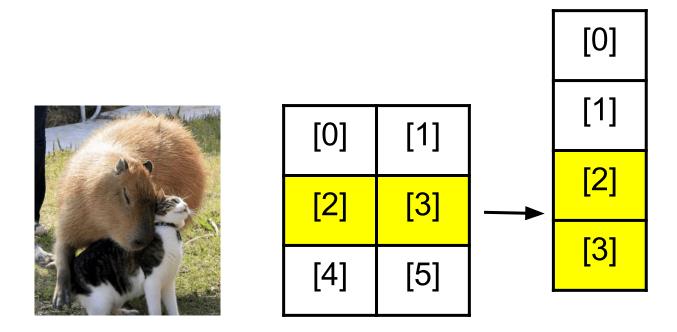




[0]	[1]
[2]	[3]
[4]	[5]


[0] [1] [2] [3] [4] [5]



		լսյ
[0]	[1]	[1]
[2]	[3]	 [2]
[4]	[5]	[3]
		[4]
		[5]



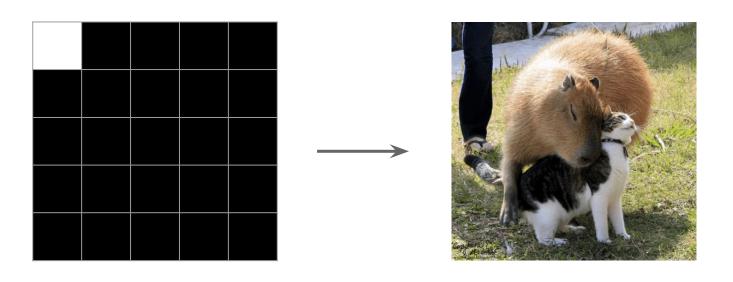


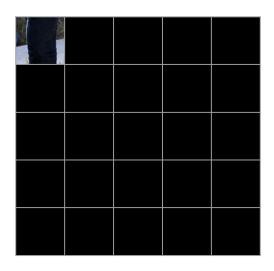

Masked image




**Image** 

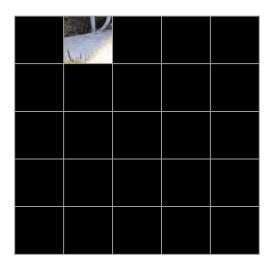

Masked image



Image

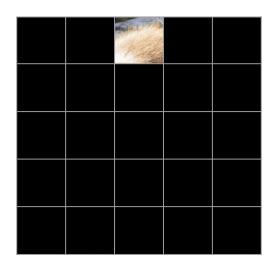

Masked image



**Image** 

#### **Poll Time!**

What would you expect the dimensions of a vector representing a 2x3 image to be?

- A. 2x3
- B. 3x2
- C. 6x1
- D. 5x1

To read all the pixels of a 4x4 image, how many pixel-by-pixel scans do we need to do?

- A. 4
- B. 8
- C. 16
- D. 32

#### **Poll Time!**


What would you expect the dimensions of a vector representing a 2x3 image to be?

- A. 2x3
- B. 3x2
- C. 6x1
- D. 5x1


To read all the pixels of a 4x4 image, how many pixel-by-pixel scans do we need to do?

- A. 4
- B. 8
- C. 16
- D. 32


## Representing our Masks in Python

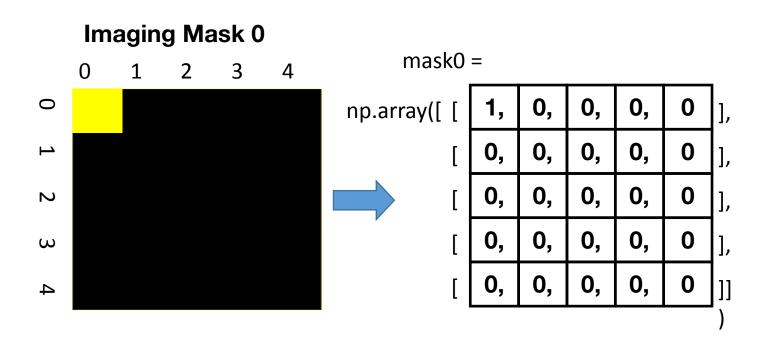


## Representing our Masks in Python

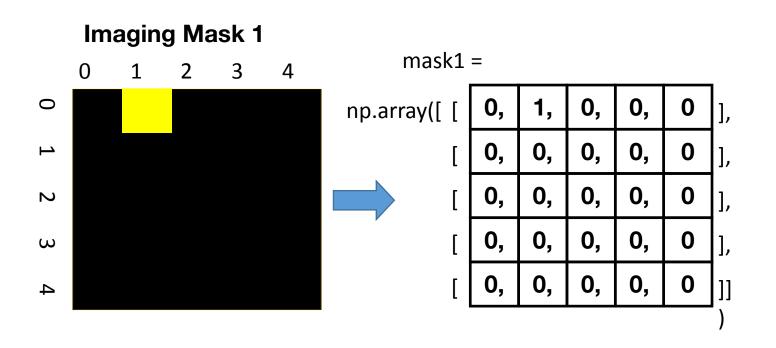

## **Turning the Masks Into Vectors**

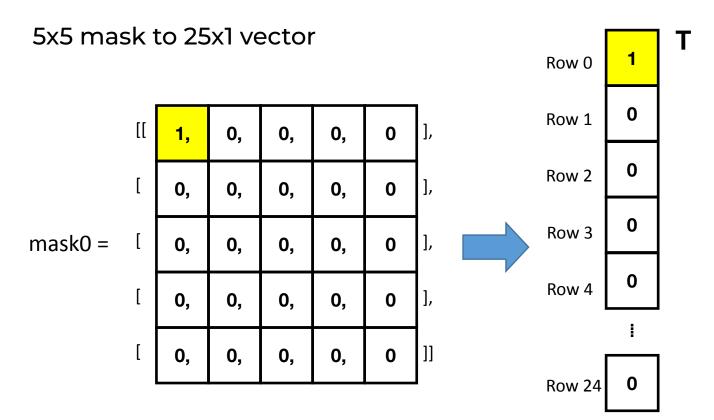



## **Turning the Masks Into Vectors**

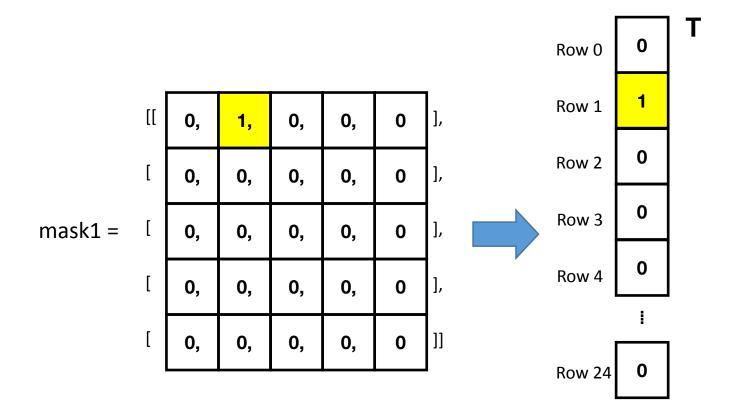


mask0


1,	0,	0,	0,	0
0,	0,	0,	0,	0
0,	0,	0,	0,	0
0,	0,	0,	0,	0
0,	0,	0,	0,	0

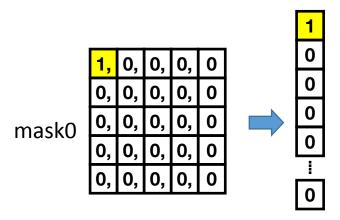


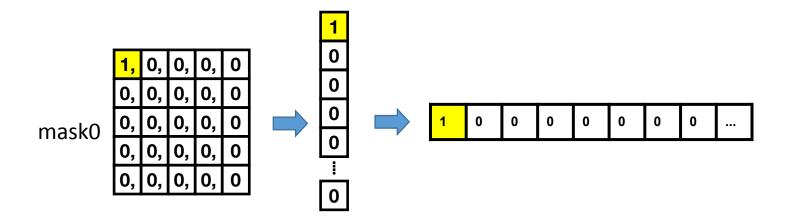

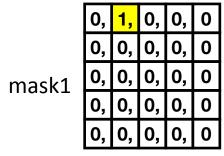



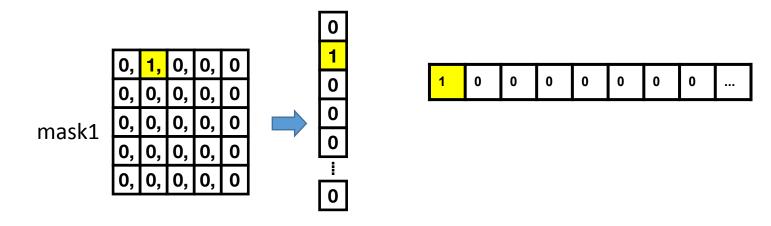

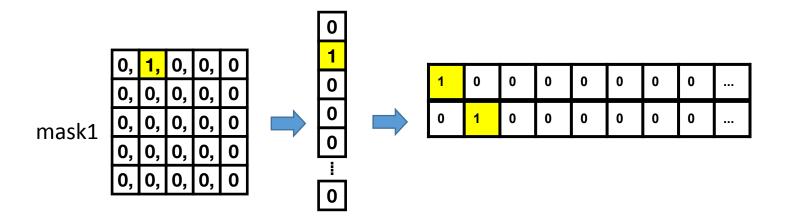

1	0	0	0	0	0	0	0	
0	1	0	0	0	0	0	0	
0	0	1	0	0	0	0	0	

1	0	0	0	0	0	0	0	:
0	1	0	0	0	0	0	0	
0	0	1	0	0	0	0	0	
0	0	0	1	0	0	0	0	


#### Generating the Masking Matrix from the Masks

↓ each column represents a pixel

H =	1	0	0	0	0	0	0	0	
	0	1	0	0	0	0	0	0	
	0	0	1	0	0	0	0	0	
	0	0	0	1	0	0	0	0	
	0	0	0	0	1	0	0	0	
	0	0	0	0	0	1	0	0	
	0	0	0	0	0	0	1	0	

← each row is a mask

### Measuring a Pixel is Matrix-Vector Multiplication

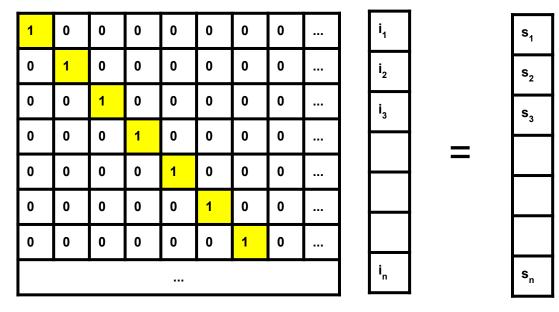

Masking Matrix H

Unknown, vectorized image,  $\vec{l}$ 

Recorded Sensor readings,  $\vec{S}$ 

### Measuring a Pixel is Matrix-Vector Multiplication

$$\vec{s} = H\vec{\iota}$$

- We know H and we have the sensor readings, how do we get the image?
- How do we solve this?
- When can we solve this?
  - Conditions on H

$$\vec{s} = H\vec{\iota}$$

Select all of the following that must be true for the image vector i to be recoverable from the sensor vector s.

- 1. H must be invertible
- 2. H must have linearly independent rows
- 3. H must be a square matrix
- 4. H must be the identity matrix

Select all of the following that must be true for the image vector i to be recoverable from the sensor vector s.

- 1. H must be invertible
- 2. H must have linearly independent rows
- 3. H must be a square matrix
- 4. H must be the identity matrix


Select all of the following that describe the relationship between H (the masking matrix), s (the sensor vector), and i (the image vector)?

- 1. Hs = i
- 2. Hi = s
- 3.  $H^{-1}i = s$
- 4.  $H^{-1}s = i$
- 5. i\*s = H


Select all of the following that describe the relationship between H (the masking matrix), s (the sensor vector), and i (the image vector)?

- 1. Hs = i
- 2. Hi = s
- 3.  $H^{-1}i = s$
- 4.  $H^{-1}s = i$
- 5. i \* s = H


### **How Scanning Works: iPython**

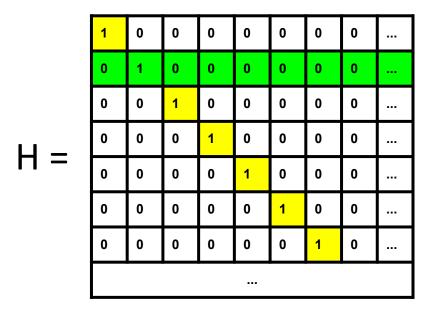


### **How Scanning Works: iPython**

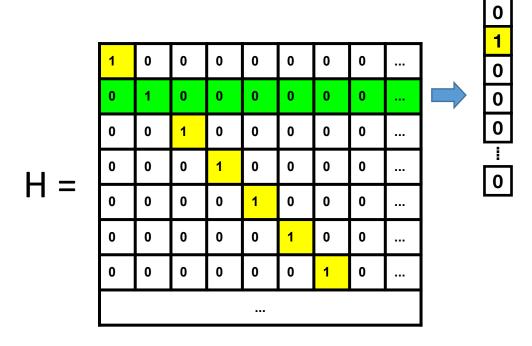

### **How Scanning Works: iPython**

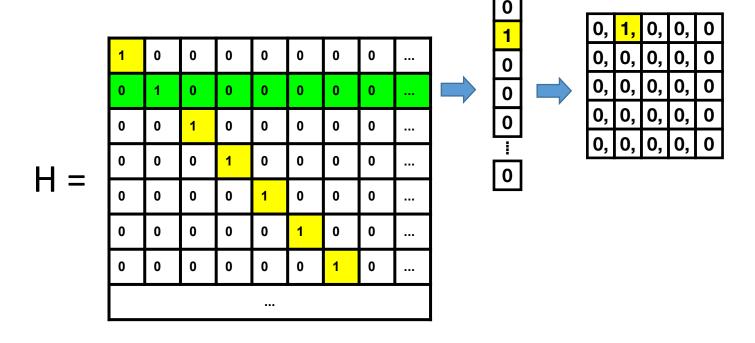


### **How Scanning Works in Python**

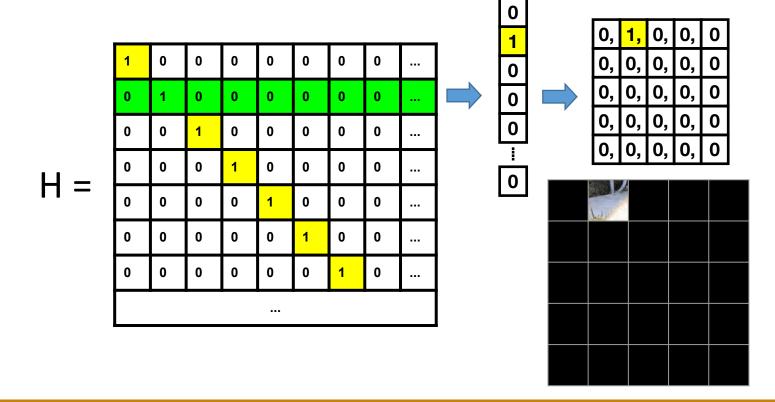

#### What Makes a Mask Good?

- Linearly independent columns → Invertible
  - Can't get a solution without this
  - There is a unique solution
- What would be a bad mask?
- Food for thought: Are all invertible matrices equally as good?
  - Find out in Imaging 3 next week

### Setup

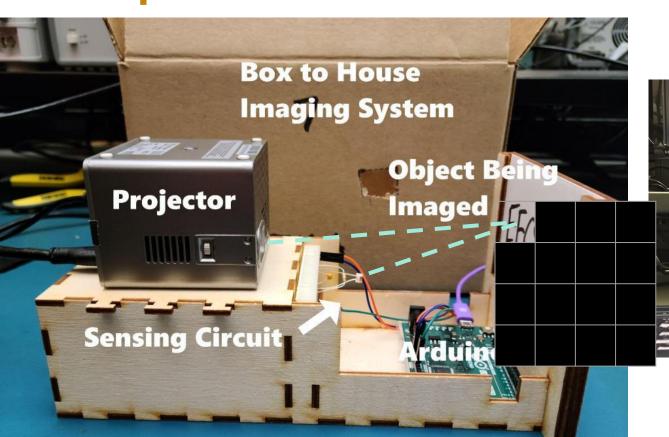


Power strip to power your projector



## Sample Images



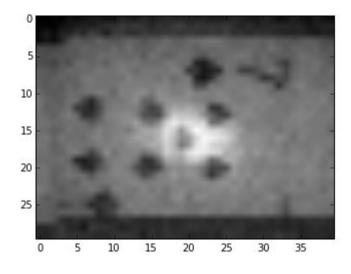

### Setup

- 1. Draw a "simple" image
- 2. Use Python to project masks onto it in a dark environment
- 3. Measure ambient light sensor reading to get s
- 4. Multiply by H inverse to find i (= H<sup>-1</sup>s)

### **Color Imaging!**

- The masks we have been using so far have been black and white (1s and 0s). Thus, B&W images
- What if we use color masks instead?
- Make use of RGB (red green blue) channels and reconstruct three different scans
- Same system as before:  $\vec{s} = H\vec{\imath}$
- Only difference is one "system" for each color
- With a bit of math/signal processing, we can get color images!

### Tips for a Good Image

- READ CLOSELY. There are many small directions that help you get a good setup
- Focus projector using dial on the side
- Close the box firmly & scan under dark conditions
- Make sure the cables are plugged in, and do not disturb them during the scanning process

# **Debugging**



- 1. Make sure wires/resistors/light sensor are not loose
- 2. Light sensor orientation: short leg goes into +ve
- 3. Čheck COM Port
- 4. Reupload code to Arduino after making any change in circuit
  5. Check Baud Rate in Serial Monitor
- (115200)
- 6. Projector might randomly restart in the middle of the lab. Make sure brightness 0 contrast 100.
- 7. If you see a very bright corner in the scan, move the light sensor away from the projector

#### Datahub link

https://eecs.datahub.berkeley.edu/hub/login?next=%2Fhub%2Fuser-redirect%2Fgit-pull%3Frepo%3Dhttps%253A%252F%252Fgithub.com%252Feel6a%252Fpublic-fa24-lab-notebooks%26urlpath%3Dtree%252Fpublic-fa24-lab-notebooks%252Flab3\_fa24%252F%26branch%3Dmain